

iVu Plus BCR Quick Start Guide

154722 9/7/2012
Rev. D




Contents

Introduction	3
Installing and Connecting the Sensor	4
iVu Plus BCR with Integrated Display	5
iVu Plus BCR with Remote Display	5
Sensor Modes	7
Demo Mode	7
Live Mode Overview	7
Read/No Read, Pass/Fail, Match/No Match	8
Output 1, Output 2, and Output 3	8
Acquiring a Good Image	9
Setting Up a Barcode Application	12
Compare Data	13
Compare Data	13
Setting up for Data Compare	13
Trigger Modes	15
External-Single Mode	15
Continuous Mode	16
External-Gated Mode	16
Command	17
Industrial Ethernet Only	17
iVu Plus Communications Overview	18
Serial and Ethernet Output	18
Communication Channels	19
Multiple Inspections	20
Adding a New Inspection	20
Changing Running Inspections	21
Changing Inspection Name or ID	22

Introduction

The iVu Plus BCR sensor is a barcode reader used to read a variety of barcodes and to optionally compare data to known values. The sensor has an integrated color touch screen display or a remote display connection making installation, setup, and configuration easy without requiring a PC.

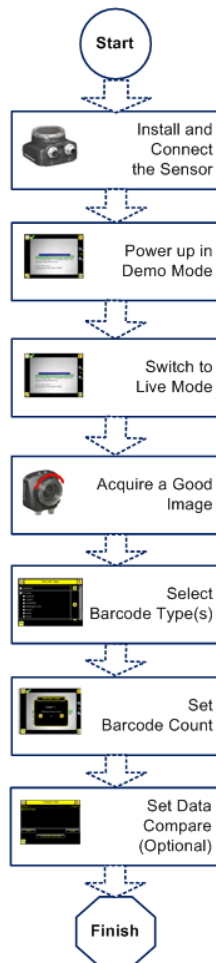

Quick Start Overview

This guide is designed to provide the necessary information to get the iVu Plus BCR up and running quickly. It provides an overview of the sensor and illustrates how to set up the sensor to read barcodes. The flow chart at left provides an overview of the process.

Related Information

The following documentation is available on the Product CD:

- *iVu Plus BCR Datasheet*
- *iVu Series Remote Display Datasheet*
- *iVu Sensor Reference*
- *iVu Plus BCR User's Manual*
- *iVu Plus BCR Communications Guide*
- *iVu Plus BCR with Remote Display Datasheet*
- *iVu Plus BCR Integrated Datasheet*

In addition, there is integrated Help built into the sensor itself.



NOTE: Before setting up the sensor, remove all packaging. If using an iVu with an integrated touch screen, carefully remove the plastic cover from the sensor's touch screen display and put aside. You should replace the cover after configuring the sensor to protect the display.



WARNING: Not To Be Used for Personnel Protection

Never use this product as a sensing device for personnel protection. Doing so could lead to serious injury or death. This product does NOT include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.



CAUTION: Electrostatic Discharge

Avoid the damage that electrostatic discharge (ESD) can cause to the Sensor.

Always use a proven method for preventing electrostatic discharge when installing a lens or attaching a cable.

Installing and Connecting the Sensor




The iVu Plus BCR sensor requires a bracket for mounting. Three brackets are available from Banner. The brackets allow the sensor to be mounted either perpendicular to the part or at an adjustable angle.

Available iVu Brackets		
SMBIVURAL	SMBIVURAR	SMBIVUU
		

Thread three M4 x 4mm screws through the bracket into the mounting holes in the bottom of the sensor. Tighten all three screws.

iVu Plus BCR with Integrated Display

The cable connections on the iVu Plus with integrated display are shown below, and power I/O connections (**C**) are defined in the **Power I/O Connections** table below.

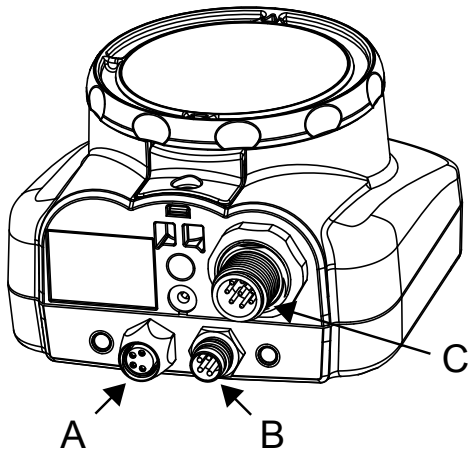


A	USB Connector
B	Ethernet Connector
C	Power I/O Connector

NOTE: Microlens model shown, C-Mount model connections are identical.

iVu Plus BCR with Remote Display

The cable connections on the iVu Plus with remote display are shown below, and power I/O connections (**B**) are defined in the **Power I/O Connections** table below.

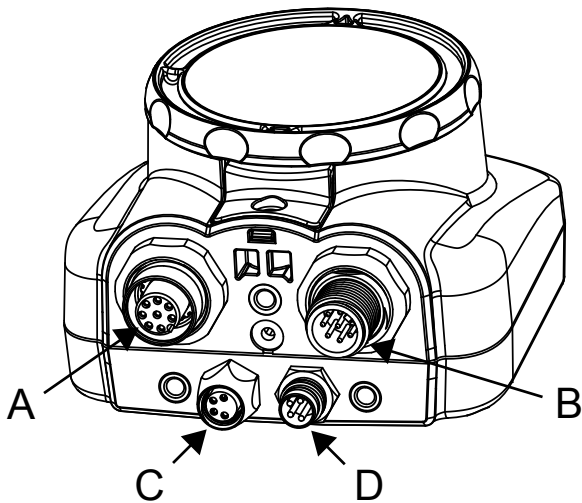

A	Remote Display Connector
B	Power I/O Connector
C	USB Connector
D	Ethernet Connector


NOTE: Microlens model shown, C-Mount model connections are identical.

Power I/O Connections			
Pin #	Wire Color	Description	Direction
2	Brown	10-30V dc	Input
7	Blue	Common (Signal Ground)	Input
6	Pink	External Trigger	Input
5	Gray	Remote Teach	Input
1	White	Output 1	Output
8	Red	Ready	Output
4	Yellow	Strobe Out (5V dc only)	Output
3	Green	Output 2	Output
9	Orange	Output 3	Output
10	Light Blue	RS-232 TX	Output
11	Black	RS-232 Signal Ground	Output
12	Violet	RS-232 Rx	Input

Sensor Modes

Demo Mode

The first time you power up the iVu Plus BCR sensor, it starts in Demo Mode. Demo Mode uses stored images and inspection parameters that demonstrate how the sensor is set up without having to worry about focus, lighting, or triggers. In this mode, you can learn how to make adjustments working with the sensor types while observing how the adjustments affect the sensor results. To exit Demo Mode, go to **Main Menu > System > Sensor Mode** and select Exit Demo Mode. When you exit Demo Mode, the sensor reboots into its normal operating mode with default settings.

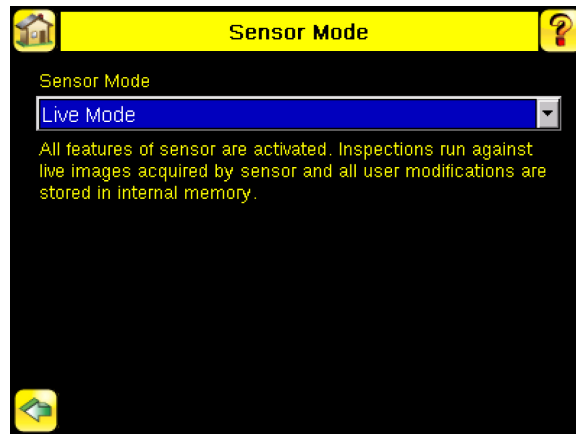


NOTE: You may return to Demo Mode any time by going to **Main Menu > System > Sensor Mode** and selecting Demo.

Live Mode Overview

The iVu Plus BCR can be configured to evaluate one or more of the supported barcode types and can look for a specific number of barcodes from 1 to 10. The barcode types are selected on the integrated touch screen by accessing **Main Menu > Inspection > Barcode > Barcode Type**. The barcode count is selected on the touch screen by going to **Main Menu > Inspection > Barcode > Barcode Count**.

This section describes some general iVu Plus BCR concepts.

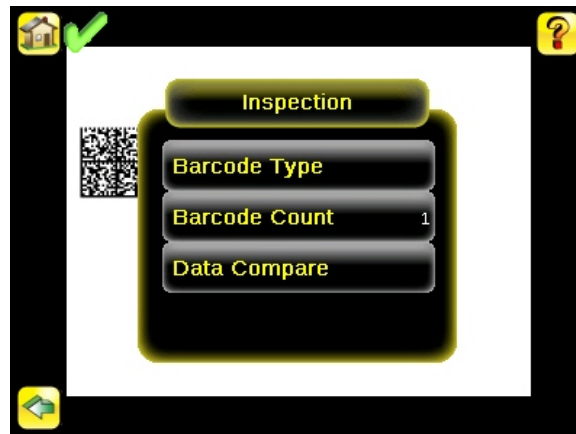

Read/No Read, Pass/Fail, Match/No Match

The following describes what is meant by Read/No Read, Pass/Fail, and Match/No Match:

- A Read condition occurs when the configured number of barcodes are found in a scan. These barcodes must be error-free.
- A No Read condition occurs when the configured number of barcodes are not found in a scan.
- If the sensor is configured where Data Compare is **disabled**, Pass and Fail are the same as Read and No Read.
- If the sensor is using the Data Compare feature, Pass indicates that a good barcode was found and the data compared.
- If the sensor is using the Data Compare feature, Fail indicates that either no good barcode was found or the data did not compare.
- A Match condition occurs when the required number of barcodes are found and the compare is successful.
- A No Match condition occurs when the required number of barcodes are found, but the compare is not successful.

Output 1, Output 2, and Output 3

The sensor has three output signals that you can configure for Pass, Fail, Read, No Read, Match, No Match, System Error, and Missed Trigger. The default settings are Pass for Output 1, Fail for Output 2, and Pass for Output 3.




NOTE: For all outputs, the default setting is Latched, which means that the signal is active until the results of an inspection cause a change in the signal output. If Pulsed is selected, the default pulse width is 50 ms.


Acquiring a Good Image

The iVu Series sensor needs to capture a good image to ensure that it can read the barcode(s) correctly.


1. Go to **Main Menu > Imager > Auto Exposure** to run the **Auto Exposure** routine.
2. Check the lighting.
 - Make sure that the lighting is constant and consistent (unchanging over time, no shadows or hot spots).
 - Capture the barcode with lighting that optimizes its contrast and separates it from the background. Depending on the target, this may mean the integral ring light is not the best choice and other Banner lights should be considered.
 - Adjust the mounting angle to provide the clearest image of the barcode. The mounting bracket lets you easily position and adjust the sensor on your line. Typically, a slight angle will help with read robustness.
3. If needed, go to **Main Menu > Imager > Auto Exposure** to run the **Auto Exposure** routine a second time or adjust **Gain** and **Exposure** manually:
 - **Main Menu > Imager > Gain**

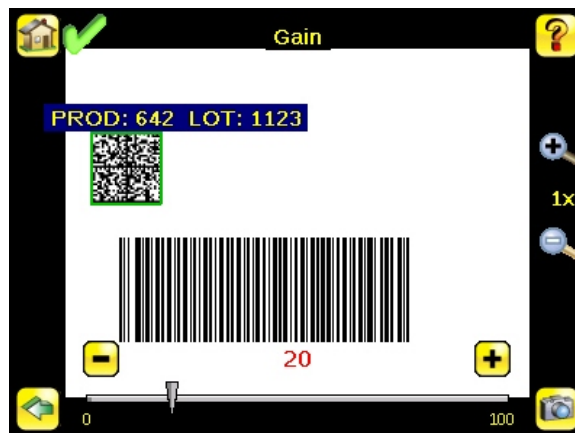

- **Main Menu > Imager > Exposure**

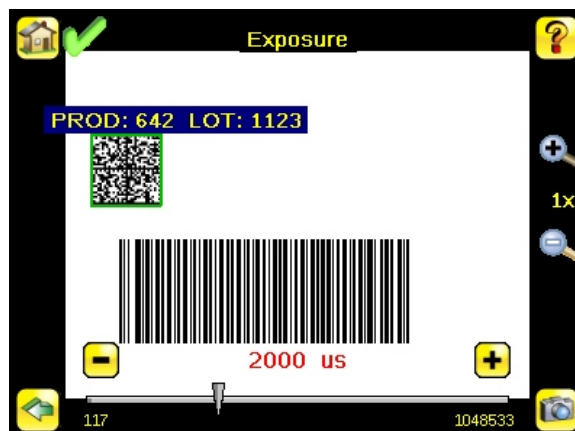

4. Go to **Main Menu > Imager > Focus** to adjust the focus while monitoring the **Focus Number**:

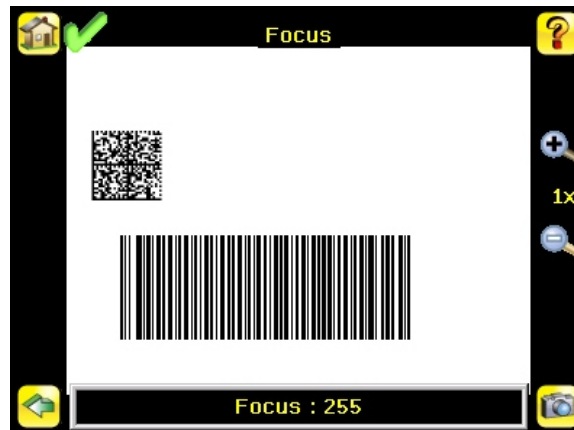

For Micro-lens Models Only:

1. Use the supplied 1/16" hex key to loosen the Focusing Window locking screw (D), then adjust focus on the iVu Series sensor using the clear Focusing Window (B).
2. Adjust focus while monitoring the focus number. To ensure the best image, adjust the focus until the Focus Number peaks.



NOTE: Turning the Focusing Window counter-clockwise focuses on closer objects, while turning the Focusing Window clockwise focuses on more distant objects.




3. Once the best image has been acquired, lock the focusing window.

Micro-Lens Models

	A	Lens
	B	Focusing Window
	C	Locking Clip
	D	Locking Screw
	E	Filter Cap (optional)
	F	Filter (optional)
NOTE: Filter Kits are available separately.		

For C-Mount Models Only:


1. Remove the Lens Enclosure
2. Adjust focus while monitoring the focus number. To ensure the best image, adjust the focus until the Focus Number peaks.
3. Replace the Lens Enclosure on the camera.

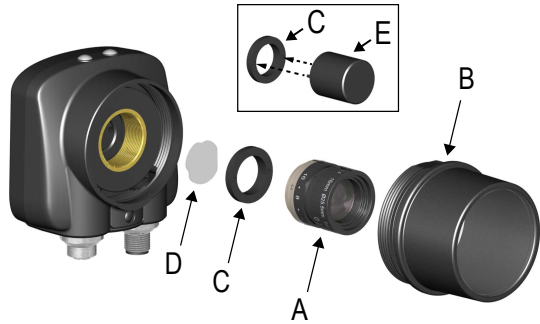C-Mount Models		
	A	C-Mount Lens
	B	Lens Enclosure
	C	Retainer Ring (optional)
	D	Filter (optional)
	E	Filter Retainer Ring Tool
NOTE: Filter Kits are available separately.		

Setting Up a Barcode Application


This section describes how to set up the iVu Plus BCR sensor.

1. Go to **Main Menu > Inspection > Barcode > Barcode Type** to select one or more Barcode Types from the list.

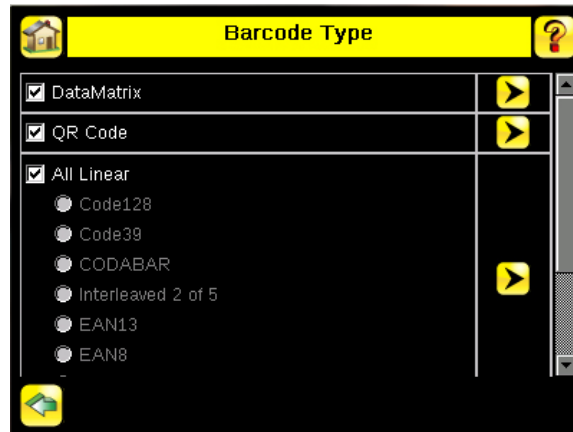

NOTE: To ensure optimal performance, select only the barcode types for your application. For example, if you use only one of the of the barcode types listed for All Linear, uncheck the box next to All Linear, and select a radio button next to the desired linear barcode type. If you use only DataMatrix, uncheck all the boxes except the one next to DataMatrix.

2. Go to **Main Menu > Inspection > Barcode > Barcode Count** to select the number of barcodes (1 to 10) to be read at one time.

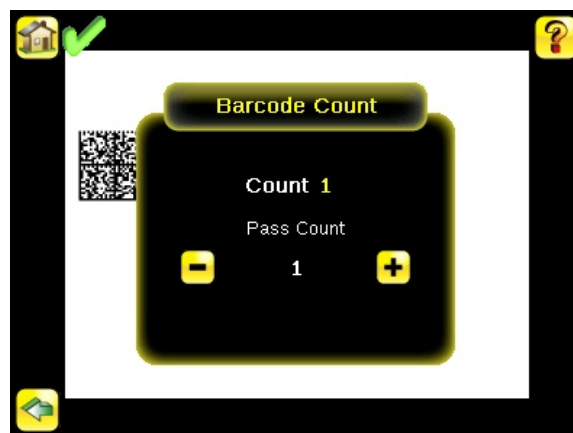

Once the sensor has been set up as described:

- Each successfully read barcode is marked by a green bounding box. If annotations are on, the barcode data is also displayed.
- Any case where data does not compare is marked with a solid red bounding box. If the barcode is marked with a dotted red bounding box, this indicates a checksum error or quiet zone violation.
- Any barcodes in the field of view that the sensor does not detect (for example, because they are not one of the barcode types selected), are unmarked.

Compare Data

Compare Data

The iVu Plus BCR has a data compare feature for comparing read barcode data against reference data. Data can be manually entered by accessing the **Main Menu > Inspection > Barcode > Data Compare > Set Data** screen. Data of up to 3200 characters can be entered. Additionally, the data compare feature provides for masking characters within the data.

There are two other ways to enter compare data:

- Importing the last read data while viewing the **Set Data** screen. The new data is effective on the first trigger that occurs after this action.
- Using Remote Teach. When a Remote Teach occurs, the data of the first read barcode is saved as Data Compare input. Inspections executed on the next trigger will use the new data for comparison with subsequently read barcodes. If the previous input data contained any masked characters, Remote Teach will retain the masked characters **only** if the new data is of the same length as the previous input data. If the length does not match, masking is removed.

The sensor tries to compare full length of this string with the data read from the barcode. If not equal, inspection will be marked as Fail.




NOTE: If the sensor reads more than one barcode in the field of view, only the first barcode data that the sensor reads can be compared.


Setting up for Data Compare

This section describes how to set up the data compare feature. For this example, the reference data will be from a previously decoded barcode.


1. Go to the **Main Menu > Inspection > Barcode > Data Compare > Compare** to Enable data compare.

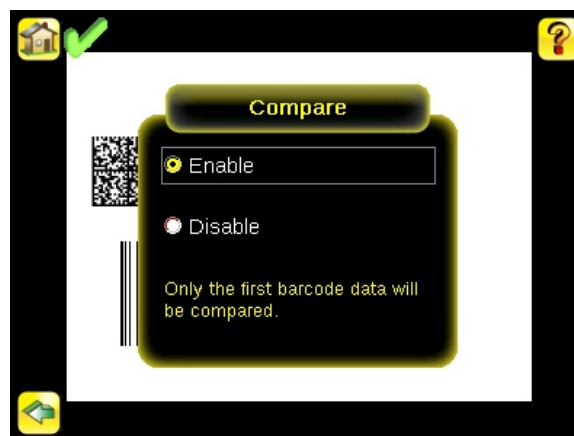


2. Go to the **Main Menu > Inspection > Barcode > Data Compare > Set Data**, and click the **Show last read data** button.

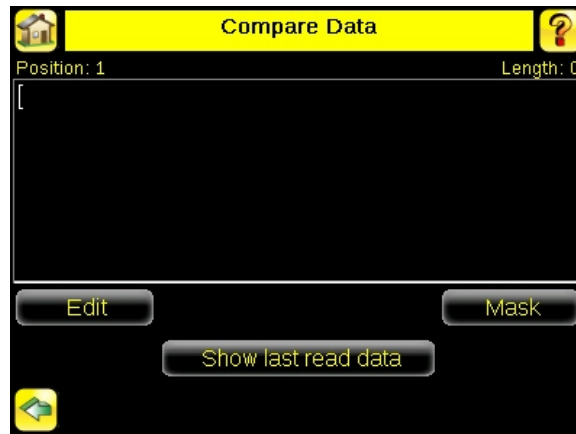

3. Press the **Yes** button.

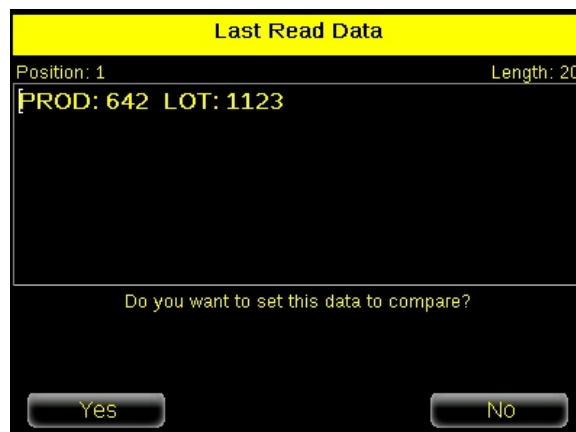

4. Press the Home icon to return to the main screen.

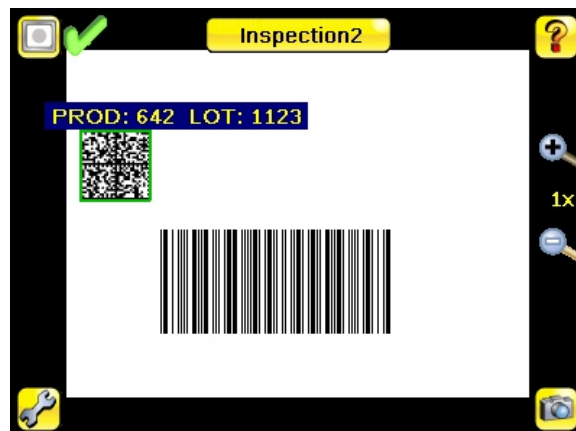


For all subsequent triggers, when the sensor reads the barcode data, it will compare it against this reference data.

Trigger Modes

The iVu Plus BCR has five trigger modes that determine how the sensor captures and processes images:


- External - Single
- Continuous
- External - Gated
- Command
- Industrial Ethernet Only

You can select one of the trigger modes by accessing **Main Menu > Imager > Trigger** on the iVu touch screen display.

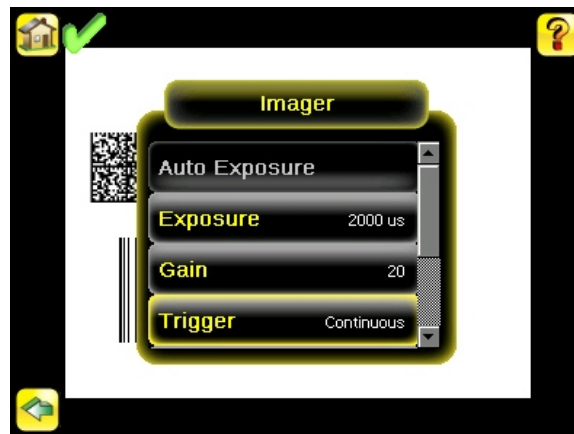

External-Single Mode


In External-Single mode, the sensor depends on an external trigger. For each trigger, the sensor captures an image and executes one scan through the configured barcode types looking for the specified number of barcodes. This trigger mode uses the Scan Time Limit parameter (**Main Menu > Inspection > Properties > Scan Time Limit**) to limit the amount of time the sensor will attempt to scan for barcodes on an image.

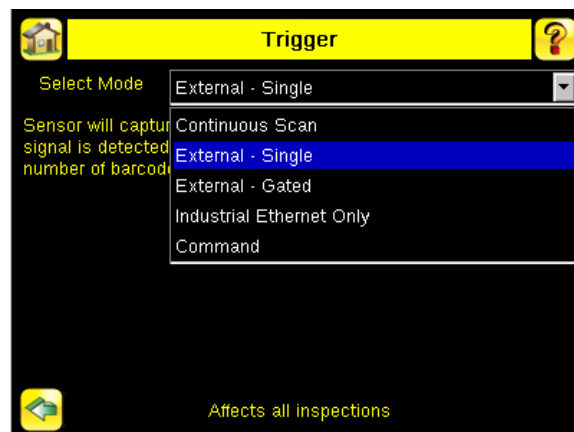

Continuous Mode

In Continuous mode, the sensor uses internal timing to continuously capture images. For each captured image, the sensor scans through the configured barcode types looking for the specified number of barcodes. If the specified number of barcodes is found, a Read event occurs. If the specified number of barcodes is not found, the sensor captures another image and repeats the scan. There are two parameters that are used to fine-tune how Continuous Scan mode operates:


- Same Code Reject Time (set at the bottom of **Main Menu > Imager > Trigger**)—time in seconds that must elapse before the scanner will report a previously scanned symbol again. A different symbol will be read immediately.
- Scan Time Limit (**Main Menu > Inspection > Properties > Scan Time Limit**)—limits the amount of time the sensor will attempt to scan for barcodes on an image.

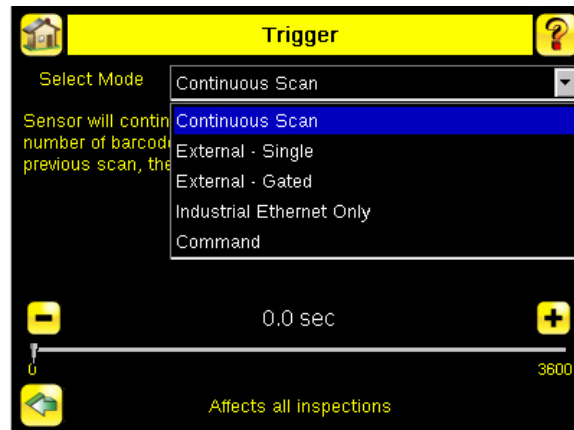

NOTE: A No Read condition will **not** occur in Continuous mode as another image capture and scan automatically follows.

External-Gated Mode

External-Gated mode is similar to Continuous mode. While an external trigger input signal is active, the sensor continues to capture images and run barcode scans until a successful Read occurs or the External Trigger input signal becomes inactive. The External - Gated mode uses the Scan Time Limit parameter (**Main Menu > Inspection > Properties > Scan Time Limit**) to limit the amount of time the sensor will attempt to decode barcodes on an image.

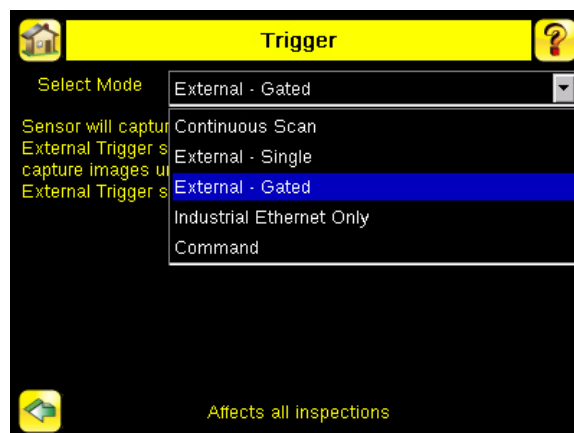




NOTE: A No Read condition will **not** occur in External - Gated mode while the external trigger is active.


Command

In Command mode, the sensor will capture images when Trigger commands are received. The various trigger command modes described above can also be set through a command channel. Refer to Communications Chapter 6 for specific commands. The commands can come from either Serial I/O or Ethernet I/O.

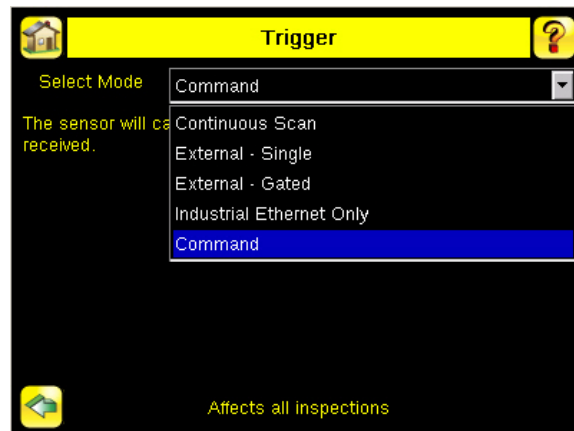

Industrial Ethernet Only

When Industrial Ethernet communication channel is enabled, triggers can be received from the modes mentioned above. Triggers through Industrial Ethernet will not be executed if selected Trigger Mode is 'Continuous Scan'. If it is desired to receive triggers only through Industrial Ethernet channel, select the 'Industrial Ethernet Only'.

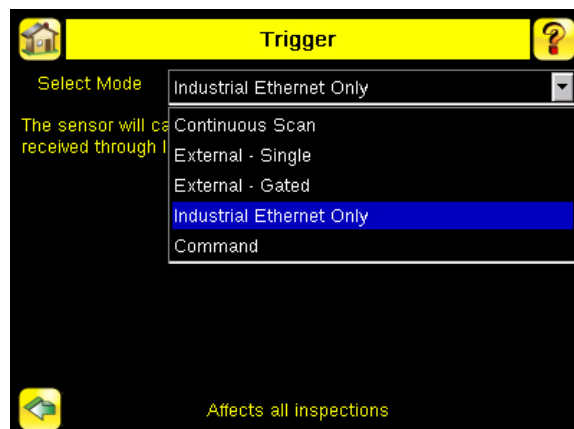

iVu Plus Communications Overview

Serial and Ethernet Output

The iVu Plus provides for communicating with other devices via Ethernet or a UART serial communications port (RS-232). In order to establish an Ethernet connection to the sensor, the external device must be configured with the correct IP address and correct TCP port to communicate. If planning to use the serial communications connection, port settings for baud rate, data bits, parity, and stop bits must be configured on the iVu Plus to match the settings of the external device.

The iVu Plus BCR RS232 port or ethernet port can be used to output barcode data to other applications. To access the Data Export screen, go to **Main Menu > System > Communications > Data Export**. The user can enable or disable this feature. When enabled:

- if the sensor is configured for either External-Single or External-Gated trigger modes, every trigger results in the transmission of output data (if the sensor does not successfully read a barcode, the output will be NO_READ).
- if the sensor is configured for Continuous trigger mode, the sensor will only transmit output barcode data upon a successful read.

To access the Serial Output screen, go to **Main Menu > System > Communications > Serial I/O**

When RS-232 serial output is enabled, the user can configure:

- Serial Port Settings (listed below)
- Type of Data to Export (listed below)
- Output Format (listed below)

To access the Ethernet Output screen, go to **Main Menu > System > Communications > Ethernet I/O**.

When ethernet output is enabled, the user can configure:

- IP Address, Port number, Subnet Mask, and Gateway
- Type of Data to Export (listed below)
- Output Format (listed below)

Type of Data to Export:

- Pass/Fail Output
- Inspection Name
- Barcode Count
- Data Length
- Symbol Type
- Barcode Data
- Frame Number
- Inspection Time (ms)

Serial Port Settings:

- Baud Rates
- Start Bits
- Stop Bits
- Data Bits
- Parity Control

Output Format:

- Start String
- Delimiter
- End String

Communication Channels

The iVu Plus BCR supports up to four communications channels. To access the channels, go to **Main Menu > System > Communications**.

- **Command Channel** — a bi-directional communication protocol that currently supports ASCII and enables other devices to remotely control the iVu Plus sensor and access sensor results
- **Industrial Ethernet** — a bi-directional communication channel that allows the user to control the sensor and access sensor results using Ethernet/IP, Modbus/TCP, or PCCC protocol
- **Data Export** — used to export selected inspection data to a remote device
- **Image Export** — used to export inspection images to a remote device

Data export and command channel can be configured for either Ethernet or Serial I/O (but not both); image export is only available over Ethernet. The table below briefly summarizes valid communication channel configuration options.

Command Channels	Scenario #1		Scenario #2		Scenario #3	
	Ethernet	Serial I/O	Ethernet	Serial I/O	Ethernet	Serial I/O
Command Channel	Yes	No	No	Yes	Yes	No
Industrial Ethernet	Yes	No	Yes	No	Yes	No
Data Export	Yes	No	Yes	No	No	Yes
Image Export	Yes	No	Yes	No	Yes	No


Multiple Inspections

The iVu Plus BCR supports multiple inspections that facilitate storing and controlling up to 30 inspections of different types of barcodes. By default, Inspection 1 is created with Data Matrix and Linear Barcodes enabled.


Adding a New Inspection

To add a new stored inspection:

1. Go **Main Menu > Inspection > Stored Inspections** and click **Add New**.

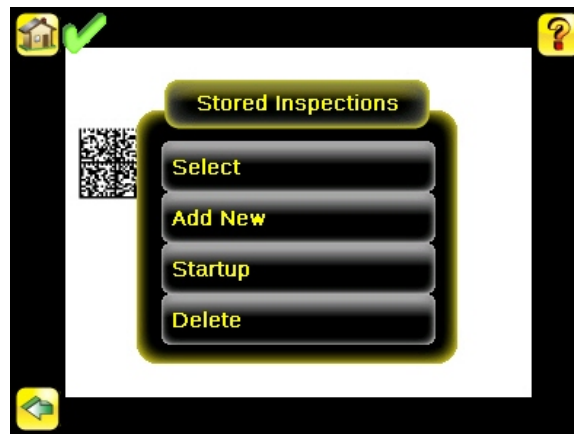

2. Select **Rename** to type a new name for the new inspection.

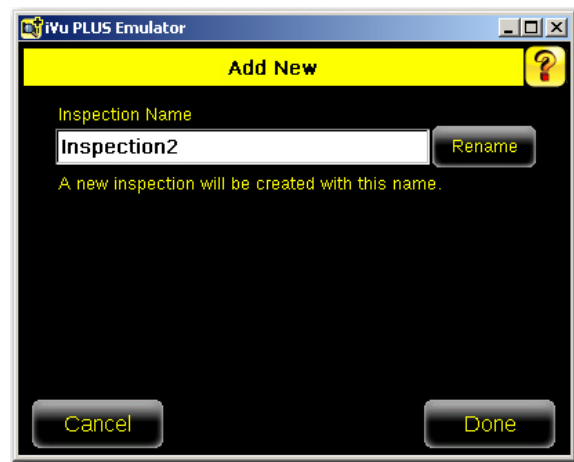

3. Click **Done**. The new inspection will automatically begin running.


Changing Running Inspections

To change the running inspection:

1. From the Home screen, click the yellow button in the top center of the screen that displays the currently running inspection. This will display all the stored inspections.



2. Select the inspection to start and click the Start Running button that appears below it.

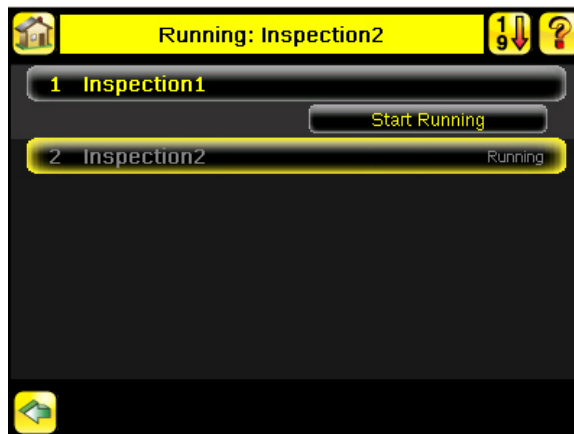

Changing Inspection Name or ID

To change the name or ID of an inspection go to **Main Menu > Inspection > Stored Inspections > Set Name/ID**. Select the inspection from the list.

